



**Restore-X®**  
**EXTERIOR WOOD DECK CLEANER**  
**03Y300**  
**PRODUCT DATA SHEET**

**CHARACTERISTICS**

**Restore-X® Exterior Wood Deck Cleaner** is formulated to restore unfinished and semi-transparent stained woods that are weathered or have dirt deposits or stains. It will dissolve old deteriorated stain and eliminate the graying effects of weathering by removing the deteriorated wood cells, mildew, mold, algae, and pollutants that cause discoloration.

**Deck Cleaner** is a concentrate that can be diluted with water to make up to 3 gallons. **Deck Cleaner** is the perfect product for decks, wood siding, fences, benches, planters, patio furniture, and other exterior wood restoration projects.

**Mixing Ratio (by volume)**

**Tough Jobs** .....apply full strength (heavy dirt, weathered wood & stains)

**Average Jobs**.....mix 1:1 with water (lightly weathered wood & dirt)

**Light Jobs**.....mix 1:2 with water (general cleaning and brightening of wood)

**PHYSICAL PROPERTIES**

**Appearance** .....Red color, liquid

**Composition**.....Sodium Hydroxide

**Solvents** .....Propylene Glycol

**Weight**.....8.44 lbs./gal.

**Ph** .....12-14

**Stability** .....Stable to 32°F (0°C)  
 (If freezing occurs, thaw and stir product)

**Coverage**.....175 –300 ft<sup>2</sup>/ per gal  
 (Depends on surface texture & thickness of coatings)

**Containers** .....1 and 5 gallon pails

**Flammability** .....Non-flammable

**Solubility**.....Water Soluble

**Environmental**.....Biodegradable, Non-Toxic

**SURFACE PREPARATION**

Read all instructions before beginning. Always run a small test patch in an inconspicuous area first. This will help you learn how much time and how much **Deck Cleaner** it will take to complete your project. Remove excess dirt and debris with a stiff bristled broom, pressure washer, or by garden hose. Protect all metal surfaces especially, bare and anodized aluminum surfaces (such as doors and window frames) by masking with silver duct tape to prevent discoloration or removal of any anodized coating. To protect any nearby plants, shrubs or other vegetation, wet them down with water and cover with a plastic

sheet before application. Thoroughly wet the surface with clean water and broom off any standing water.

**APPLICATION**

Apply **Deck Cleaner** in a thick, liberal coat. Thin coats are not as effective. Apply with synthetic brush, roller or pump up garden sprayer. Do not allow exposed surfaces to dry out. As needed, lightly mist the working area with water. Do not apply if the material, ambient air, or substrate temperature is below 45°F (7°C).

**Wait!** It is very important to allow **Deck Cleaner** time to work. Unfinished weathered wood will take 10 to 15 minutes whereas deteriorated stain in exposed areas removes in as little as 5 minutes. Stain in protected areas may require up to 1 hour. Expect some variation in time required for **Deck Cleaner** to work. Mist lightly with water every 15-20 minutes.

**REMOVAL**

Test a small area by using a scrub brush to see if the finish is ready for removal. For tough jobs, agitate the surface with a firm nylon bristled brush, or a long handled push broom for larger areas, and rinse thoroughly with water using high pressure water from a garden hose or a pressure washer. For average and light jobs, simply rinse thoroughly with high pressure from garden hose or pressure washer. Hose off all plants, shrubs or other vegetation after the job is complete.

**CLEAN-UP INFORMATION**

When working with **Deck Cleaner**, walking surfaces, ladders, and scaffolding may become slippery. Rinse all surfaces thoroughly to remove spatters & drippings. Clean hands, tools, equipment and clothing with soap and warm water.

**CAUTION**

Keep away from children, pets and other animals. Protect from freezing. This product contains sodium hydroxide and other chemical ingredients. Adequate health and safety precautions should be observed during storage, handling, use and drying periods. Use with adequate ventilation. Do not mix product with any other materials, detergents or any other additives.

**(OVER)**



**Restore-X®**  
**EXTERIOR WOOD DECK CLEANER**  
**03Y300**  
**PRODUCT DATA SHEET**

**SAFETY**

This product contains solvents and/or other chemical ingredients. Adequate health safety precautions should be observed during storage, handling, use and drying periods.

Use wrap-around goggles, other appropriate chemical eyewear protection, non-permeable rubber gloves and other appropriate clothing protection when using Restore-X® Exterior Wood Deck Cleaner. READ MATERIAL SAFETY DATA SHEETS BEFORE USING THIS PRODUCT.

**LIMITATIONS**

The technical data and suggestions for use in this product data sheet are currently correct to the best of our knowledge, but are subject to change without notice. Because application and conditions vary, and are beyond our control, we are not responsible for results obtained in using this product, even when used as suggested. The user should conduct tests to determine the suitability of the product for the intended use (including liability for breach of warranty, strict liability in tort, negligence or otherwise) is limited exclusively to replacement of the product or refund of its price. Under no circumstance are we liable for incidental and consequential damages.

Supersedes previous data sheets for this product.  
Revised 5/8/06